




# Schedule of Factory Maintenance Service Operations

## 2020/2021 ICE and PHEV Models

S60 • S90 • V60 • V60CC • V90 • V90CC • XC40 • XC60 • XC90

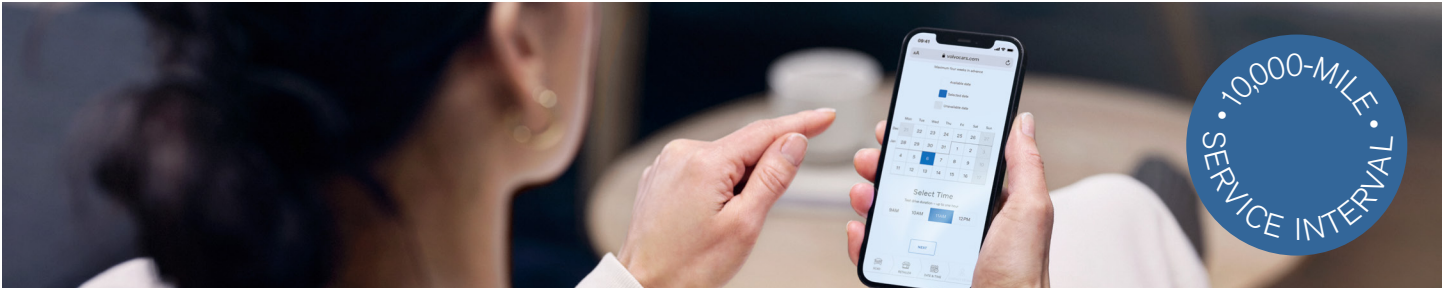

To enhance the My Volvo Experience, your new Volvo car includes complimentary factory scheduled maintenance which covers the first three (3) regularly scheduled maintenance services at 10,000, 20,000 and 30,000 miles.

### Every **10,000** Miles

- ❑ **Engine Oil, Oil Filter and Gasket: Replace**
  - Every 10,000 miles or every 12 months, whichever comes first.
  - Synthetic engine oil
- ❑ **Automatic Transmission Control**  
Check the park/neutral position (PNP) switch.
- ❑ **Engine Coolant: Check and Adjust Antifreeze Rating and Anti-Corrosion Agent**
- ❑ **Washer Fluid Level: Check/Adjust**
- ❑ **Wiper Blades And Washers:**  
Check For Function And Signs Of Wear.
- ❑ **Horn: Check Function**
- ❑ **Seatbelts: Check Function**
- ❑ **Brake Fluid Level: Check/Adjust**
- ❑ **Brake Fluid: Replace Every 3 Years**  
Volvo recommends replacing every 3 years, or 40,000 miles (if driven in mountainous areas or humid climates—every year) at owner's expense.
- ❑ **Parking Brake: Check/Adjust**
- ❑ **Brake Pads/Discs: Check**  
Worn-out pads will result in irregular braking, reduced stopping power and damage to rotors (discs).
- ❑ **Wheels and Tires: Check Wear and Condition**
- ❑ **Service Reminder Indicator (SRI): Reset**  
Clears codes for next scheduled service.

### Every **20,000** Miles (20, 40, 60, 80, 100, 120, 140)

- ❑ **Driveline - Engine/Transmission/Timing Gear: Check For Leaks**
- ❑ **Headlights and Fog Lights: Check and Align**
- ❑ **Inside of Windshield in Front of Camera: Clean**  
Vehicles with camera for collision warning. (first 20,000 miles only)
- ❑ **Cabin Air Filter: Replace**  
Volvo recommends that the filter be replaced at least once a year or more often in heavy traffic and dirty/dusty areas.
- ❑ **Wheels and Tires: Check Inflation Pressure**  
Initiate reset/calibrate tire pressure monitor system.
- ❑ **Spare Tire: Check For Damage, Wear and Tire Pressure**



Every **40,000** Miles (40, 80, 120)

- ❑ **Fuel Lines and Fuel Filter: Check For Leakage and Damage**
- ❑ **Engine Air Cleaner (ACL): Clean The Air Cleaner Housing/Replace Filter**  
May be necessary to change more frequently when driving in dirty/dusty areas.
- ❑ **Steering/Front Suspension: Check For Wear**
- ❑ **Rear Suspension: Check For Wear**
- ❑ **Final Drive/Bevel Gear: Visual Inspection**  
Only check the level if there is leakage. All-wheel drive models only.
- ❑ **Driveshaft Joints: Check For Wear/Play**
- ❑ **Driveshafts: Check Rubber Boots**
- ❑ **Propeller Shaft, Pilot Bearing and Universal Joints: Check Wear**  
All-wheel drive models only.
- ❑ **Brake Hoses and Lines: Check For Damage/Leaks**

## Every 50,000 Miles (50, 100, 150)

- **Automatic Transmission Fluid Level: Check/Adjust**  
Check automatic transmission fluid level only if an external leak is identified. Volvo recommends changing transmission fluid every 50,000 miles, only on vehicles used for towing, or when a message appears in the instrument panel text window.

### Every 60,000 Miles (60, 120)

- ❑ **Spark Plugs: Replace**

## Every 150,000 Miles

- ❑ **Accessory Drive Belt, Belt Tensioner and Idler Pulley: Replace**  
Replace at 150,000 miles or 10 years, whichever comes first.
- ❑ **Timing Belt, Tensioner and Idler Pulley: Replace**  
Replace at 150,000 miles or 10 years, whichever comes first.

## General

- ❑ **Software and Parts: Check/Replace**  
Check and replace parts or software, as required by Volvo Car USA, LLC, that are covered under the terms of the Volvo New Car Warranty. For service intervals beyond 150,000 miles, consult your authorized Volvo dealer.

### Dealer Recommendations/Comments

Important: Only full synthetic oil meeting ACEA A5/B5 requirements should be used. Lower quality oils may not offer the same engine performance or engine protection.  
Source: Volvo Warranty and Service Records Information.

